

Projector
M401H-W / M421W-W

Quick Setup Guide
Guide de configuration rapide
Guía de configuración rápida
Guia de configuração rápida

- Please also see the other side.
- Veuillez également voir l'autre côté.
- Por favor vea también el otro lado.
- Por favor, veja também o outro lado.

Model No.
XP-M401H-W / XP-M421W-W

EN	• First read the Important Information. It covers information about projector safety and cautions. • The complete user's manual is posted on the web site in PDF (Portable Document Format) and provides detailed product and usage information for your projector.
FR	• Lisez d'abord les informations importantes. Ces informations portent sur la sécurité du projecteur et les précautions d'emploi. • Le mode d'emploi complet est publié sur le site internet au format PDF (Portable Document Format) et fournit des informations détaillées sur le produit et l'utilisation de votre projecteur.
ES	• Primero lea Información importante. Cubre la información sobre la seguridad y las precauciones del projector. • El manual del usuario completo está publicado en el sitio web en formato PDF (Portable Document Format) y proporciona información detallada sobre el producto y el uso de su projector.
PT	• Primeiro, leia as Informações Importantes. Elas cobrem informações sobre a segurança do projetor e as precauções. • O manual do usuário completo é fornecido no site em PDF (Portable Document Format) e tem informações detalhadas sobre o produto e o uso do seu projetor.


[US] <https://business.sharppusa.com/product-downloads>
[Global] https://sharp-displays.jp.sharp/dl/en/pj_manual/lineup.html




The illustrations for this Quick Setup Guide

Step 1 Setting Up the Screen and the Projector.


Refer to the table of the throw distance in the User's Manual.

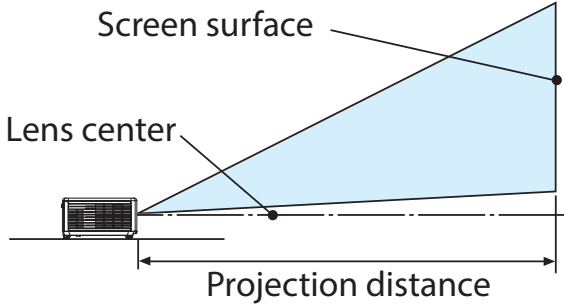

Step 2 Install the batteries in the remote control.

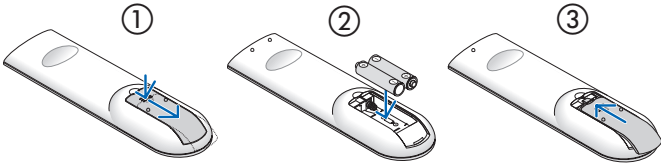


Step 3 Connect your computer and AC adapter to the projector.

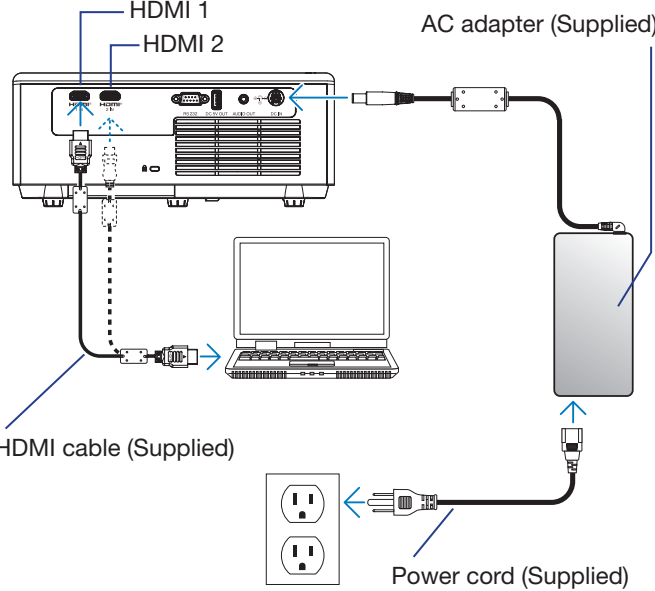


Cable information
Use the included HDMI cable to connect to the projector. Please purchase any additional HDMI cables (model: 0TJM401H01019). Any additional cables should be shielded. Using another type of cable may interfere with radio and television reception.

NOTE:
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Step 4 Turn on the projector.

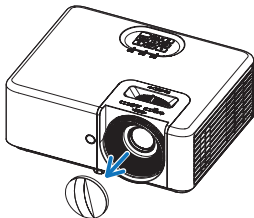


On the projector cabinet

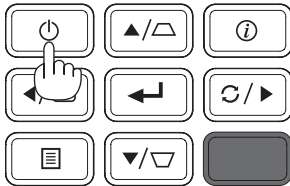

or


On the remote control

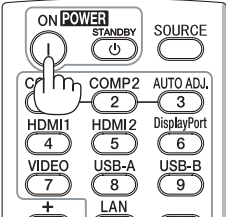

TIP. Change OSD language

1. Press [MENU] button.


2. Select [Setup] → [Options] → [Language]

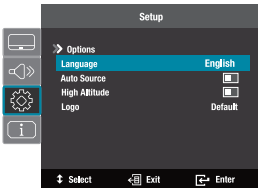

Step 5 Select a source.


Press the SOURCE button

On the projector cabinet

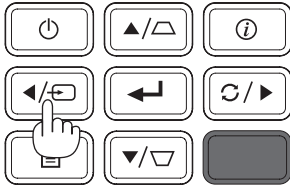


or

On the remote control

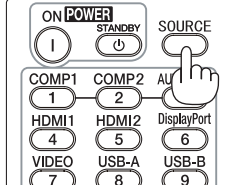


Press the HDMI1 or HDMI2 button

On the remote control

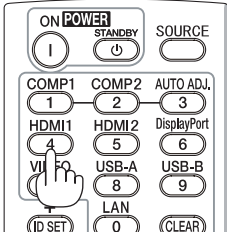


TIP. Resynchronize input signal

On the projector cabinet

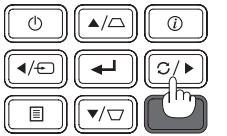


or

On the remote control

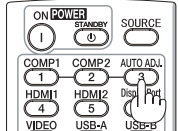


Step 6 Adjust an image size and position.

FOCUS

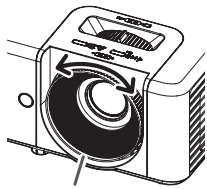


Focus ring

ZOOM

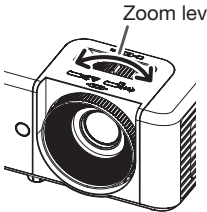


Zoom lever

TILT FOOT

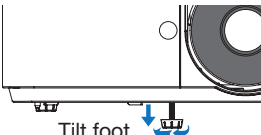


Tilt foot

REAR FOOT

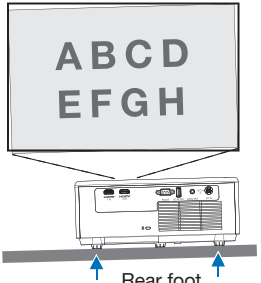


Rear foot

KEystone (Vertical)

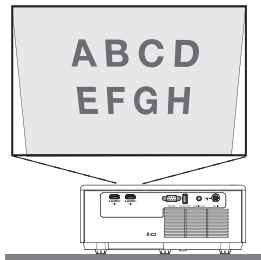


Step 7 Turn off the projector.

On the projector cabinet

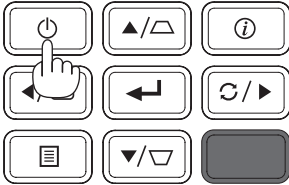


or

On the remote control

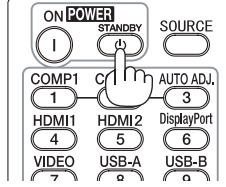

Power Off

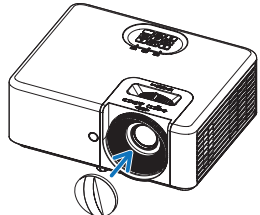

Power Off?
Press power key again.

